## **ErP Power Mode Information Sheet**

Number: 15-001

Revision: 1



## Phaser 6020

Device Type Printer

ErP Equipment Type: Other Networked Equipment

**POWER SUPPLY** 

Voltage (Volts) 230 Output Rating (Watts) 1150

## **POWER MODE**

	Power (Watts)	Default Period (Minutes)
Active	220	Not applicable
Ready/Standby	42	0
Sleep 1	10	5
Sleep 2	1.96	6
Plugged In Off	0.04	Not applicable
Networked Standby - All	1.96	Not applicable
Networked Standby - USB	1.67	11
Networked Standby - Wireless	1.96	11

## **GUIDANCE - WIRELESS PORT**

Launch the Printer Settings Utility Select the Printer Maintenance Tab Select Wireless Setup

1. Deactivation

Select Disable to deactivate

2. Activation

Select Enable to activate

For more information about Xerox environmental programs in *North America*, refer to: <a href="www.xerox.com/Environment">www.xerox.com/Environment</a>
For more information about Xerox environmental programs in *Europe*, refer to: <a href="www.xerox.com/environment">www.xerox.com/environment</a> europe