

# ErP Power Mode Information Sheet

Number: 16-001

Revision: 1



## Phaser 3330

Device Type: Printer  
ErP Equipment Type: Other Networked Equipment

### POWER SUPPLY

Voltage (Volts) 230  
Output Rating (Watts) 700

### POWER MODE

	Power (Watts)	Default Period (Minutes)
Active	604.6	Not applicable
Ready/Standby	46.32	0
Sleep 1	1.5	1
Plugged In Off	0.0	Not applicable
Networked Standby - All	1.6	Not applicable
Networked Standby - USB	1.5	1
Networked Standby - Ethernet	1.6	1
Networked Standby - Wireless	1.6	1

### GUIDANCE – WIRELESS PORT

1. Press the **Menu** button
2. Use the ↓ arrow to scroll down to **Tools**
3. Use the → arrow to enter **Tools** menu
4. Use the ↓ arrow to scroll down to **Setup**
5. Use the → arrow to enter **Network Settings**
6. Use the ↓ arrow to scroll down to **Wireless**
7. Use the → arrow to enter **Wireless** menu
8. Use the ↓ arrow to scroll down to **WiFi**
9. Use the → arrow to select **WiFi**
10. Use the ↓ arrow to select **ON** or **OFF**
11. Press **OK**.

For more information about Xerox environmental programs in *North America*, refer to: [www.xerox.com/Environment](http://www.xerox.com/Environment)  
For more information about Xerox environmental programs in *Europe*, refer to: [www.xerox.com/environment\\_europe](http://www.xerox.com/environment_europe)

Xerox Corporation provides Power Mode Information Sheets in response to the provisions of ErP Directive 2009/125/EC with regard to eco-design requirements for standby, off mode power consumption of applicable networked printers according to Commission Regulations (EC) No 1275/2008 of 17 December 2008 and (EU) No 801/2013 of 22 August 2013 [Form Rev-1g]